


## LENS COVER SWITCH POSITIONS

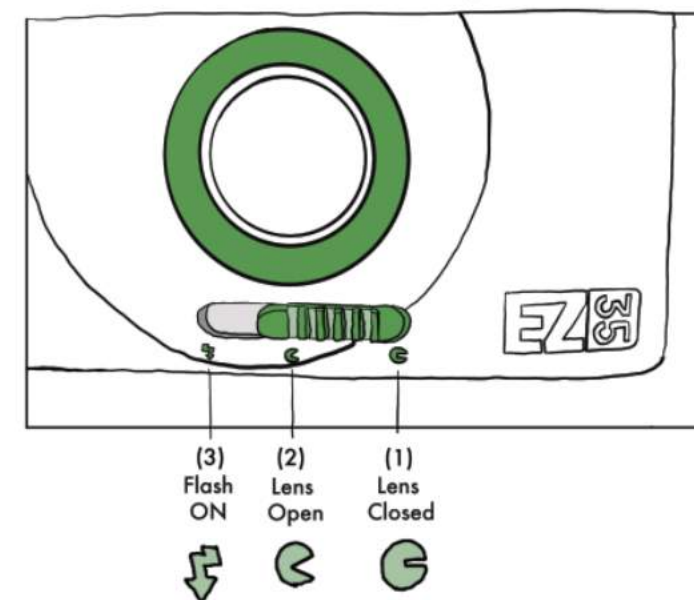

**1.** Open the battery cover on back of camera, insert (1) AA battery (included) and close the cover.

**2.** Open the camera by sliding the switch upwards and swinging the back open.

**3.** Insert the film cassette and pull out a length of film to the left onto the Take-Up Spool. Ensure that the sprocket holes line up with the plastic teeth of the camera.

**4.** (1) Close the camera back firmly with a CLICK. (2) With the lens in the open position press the Shutter Button for the film to auto-wind. Press until the Frame Counter reads '1'.

**5.** If flash is desired, slide the Lens Cover Switch fully to the left to charge the flash. When ready, the Flash Ready Light on the back of the camera will illuminate green.

**6.** Stand at least 1.5 meters away from subject. Use flash indoors or as a fill if subject is in shade. For best results outdoors, stand with the sun at your back.

**7.** To preserve battery, move the lens cover switch to the "closed" position after you have finished taking photos.

**8.** When the film is finished, slide the rewind switch (bottom of camera) to the rewind position and the film will automatically rewind. Open the back and remove film for developing.

This was illustrated  
and designed by  
**Exploredinary**

**Warranty:** The HARMAN EZ-35 camera is not designed to be repaired or refurbished. If you have a functional issue within 60 days of purchase, please contact your retailer with confirmation of the issue and proof of purchase to receive a replacement product.